


TRIWA

NIKKI INSTRUCTIONS

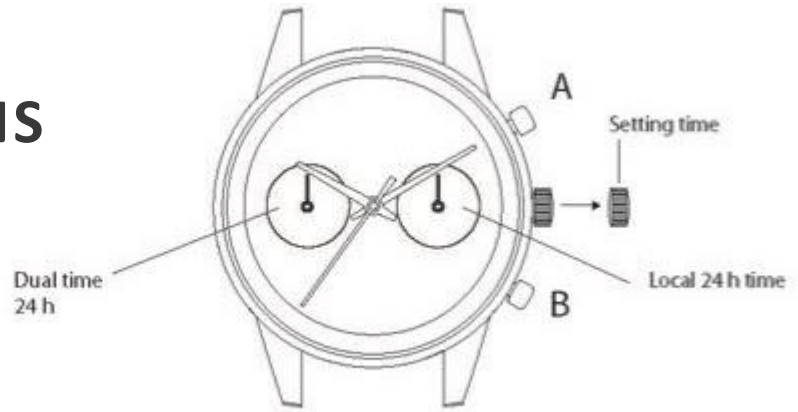

Setting the LOCAL TIME:

1. Pull out the crown when the second hand is at the 12 o'clock position.
2. Turn the crown to set the hour and minute hands. (make sure 24 hour hand is set correctly).
3. Push the crown back in the normal position.

Setting DUAL TIME hand position (left mini dial):

Before setting the time, check if the dual time hour hand is at the "0" (24 o'clock) position. If the dual time hour hand is not at the "0" position, reset it following this procedure:

1. Pull out the crown
2. Press button A or B to reset the dual time hour hand to "0" position.
Button A: dual time hour hand moves counter-clockwise.
Button B : dual time hour hand moves clockwise.
The dual time hour hand moves quickly if the respective buttons are kept pressed.
3. Push the crown back to normal position.

Quick-changing the DUAL TIME to different time zone:

1. Crown at normal position.
2. Adjust the time by pressing the button A or B. Button A : - 1 hour / push Button B : +1 hour / push.

Precise adjustment of DUAL TIME:

1. Pull out the crown when the second hand is at the 12 o'clock position.
2. Adjust the time by pressing the button A or B.
Button A : -10 minute / push
Button B : +10 minute / push
Adjust the time by pressing the button A or B.
3. Push the crown back in the normal position.